

**CZAKI THERMO-PRODUCT**

ul. 19 Kwietnia 58  
05-090 Raszyn-Rybie  
tel. (22) 7202302  
fax. (22) 7202305  
www.czaki.pl  
handlowy@czaki.pl

**USB - RS485 INTERFACE****IF485U****USER MANUAL****1. Application and construction**

The IF485U interface is used to connect devices equipped with an RS485 port to a computer with a USB port and installed Windows®.

The electronic system is placed in a plastic housing equipped with a USB-B socket on one side and a detachable terminal for connecting the RS485 cable on the other. The interface is powered from a USB port and provides galvanic separation computer - Rs485 device. Two-way data transmission is signaled by lighting of appropriate LEDs: RxD (green) - the computer is receiving, TxD (yellow) - the computer is transmitting.

## 2. Software installation

 
For interface communication with the computer, it is necessary to install its drivers. Together with the installation instructions they are on the enclosed CD.

This installation will cause that after connecting the interface to the computer will be available an additional virtual serial port.


The current version of the drivers can also be downloaded from [www.czaki.pl](http://www.czaki.pl) from IF-485U product page.

## 3. Connection diagrams to Czaki's devices


### 3.1. Connecting a temperature meter EMT-220-RS-485 and process monitor LM-220-RS-485




### 3.2. Connecting a temperature meter EMT-200 / RS-485

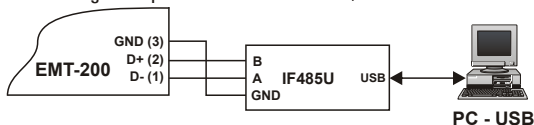 

### 3.3. Connecting multi-channel switch PMP-201 / RS-485

 

### 3.4. Connecting multi-channel logger WRT-16

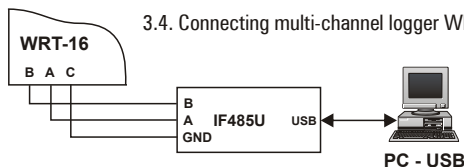 

## **4. Technical data**

• Computer side connector	USB-B socket
• Computer signal standard	USB1.1, USB2.0
• Supply current	ca. 25 mA
• Galvanic insulation between connectors	500 V AC
• Length of USB A4-B4 cable in set	2,0 m
• RS-485 standard	TIA/EIA-485-A
• Maximum baud rate	230400 bps
• Ambient temperature	0...+50 °C
• Dimensions	50 x 35 x 20 mm
• Weight	ca. 20 g

## **5. Maintenance**

The device does not require periodic maintenance.

In case of damage please contact CZAKI THERMO-PRODUCT Sales Department.

## **6. Contents of package**

- IF-485U interface
- USB A4-B4 cable
- RS485 plug
- User's Guide