


TEMPERATURE AND HUMIDITY SENSOR WITH TRANSMITTER

type HTT-952

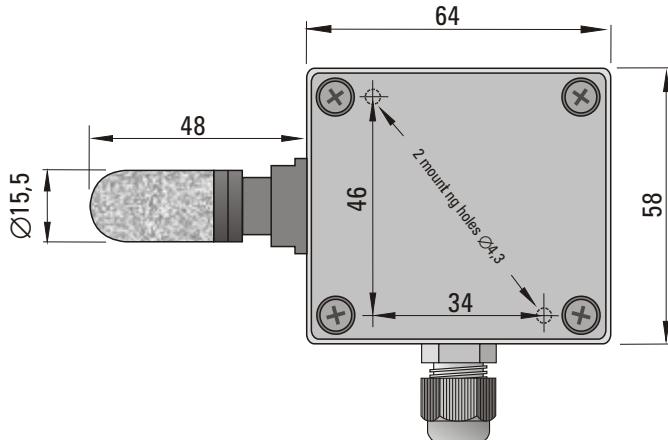

TECHNICAL DATA

Sensor

Application

measurement of temperature and relative humidity of the surrounding air

Measuring range

Indoor and outdoor. Wall-mounted

-40°C...+80°C, 0...100%RH

Housing

58 x 64 x 35 mm, PC material

Sensor sheath

Ø15,5 x 48 mm, PA material (gland), PE material (filter)

Ambient temperature

-40°C...+80°C

Transmitter

Processing ranges:

temperatures

programmable, max. -40°C ... +80°C (upper - lower $\geq 10^\circ\text{C}$)

relative humidity

programmable, max. 0% ... 100% (upper - lower $\geq 10\%$)

dew point temperature

programmable, max. -40°Cdp ... +80°Cdp (upper - lower $\geq 10^\circ\text{Cdp}$)

Dew point is calculated based on relative humidity and temperature

Temperature processing error

max. 0,5°C for $0^\circ\text{C} \leq T \leq 60^\circ\text{C}$ and max. 1,5°C beyond this range

Humidity processing error

max. 3% for $20\% \leq RH \leq 80\%$ and max. 5% beyond this range

Output signals

programmable in the range 0-20mA, default 4-20mA (HTT-952/A)

programmable in the range 0-10V, default 0-10V (HTT-952/V)

Power supply

12 ... 36 V DC / 55 mA (HTT-952/A)

14 ... 36 V DC / 35 mA (HTT-952/V)

Programming

using the IF-2013U interface, connected to the computer with a E-config program

Accessories (ordered separately)

IF-2013U programming interface

E-config program (also downloadable at www.czaki.pl)

ORDERING CODE

(1)	(2)	(3)	(4)	(5)	(6)	(7)
HTT - 952	/					

(1) Output signals

A current outputs referenced to the supply minus, default 4-20mA

V voltage outputs referenced to the supply minus, default 0-10V

(2) Lower end of temperature processing range

value in [°C], default -40

(3) Upper end of temperature processing range

value in [°C], default +80

(4) Lower end of humidity processing range

value in [%RH] lub [°Cdp], default 0

(5) Upper end of humidity processing range

value in [%RH] lub [°Cdp], default 100

(6) Humidity unit

%RH or °Cdp, default %RH

(7) Output signals other than the default e. g.. 0-20mA, 1-5V

Example for order:

HTT-952/A denotes a sensor with transmitters: temperature in the range of -40...+80°C and humidity in range of 0...100%RH to current signals 4...20mA.

HTT-952/V/-20/50/-30/40/°Cdp denotes a sensor with transmitters: temperature in the range of -20...+50°C And humidity in range of -30...+40°Cdp to voltage signals 0-10V.