

CZAKI THERMO-PRODUCT

05-090 Raszyn ul.19 Kwietnia 58
tel. 22 7202302 fax. 22 7202305
handlowy@czaki.pl
www.czaki.pl



Temperature meter EMT-302 User's manual



Version18.01



CE

1. Safety rules

- read these instructions before use
- ensure working conditions (power supply, humidity, temperature) in accordance with the specifications
- the device complies with the requirements of PN-IEC 1010-1 for safety The device complies with the requirements of PN-IEC 1010-1 for safety of electrical equipment for measurement, control and laboratory use. as well as the requirements of the EMC directive for electromagnetic compatibilityj

2. Device characteristics

EMT-302 is a single range digital instrument designed for absolute temperature measurements, adapted for cooperation with two thermoelectric sensors type K according to PN-EN 60584-1. The measurement result is a linear function of temperature. The meter has electronic temperature compensation of the cold ends of the thermocouple.

3. Dane techniczne

product	type of sensor	indication range (°C)	indication range (°F)
EMT-302	K	-200 ... 1360	-200 ... 1999

Digital readout LCD backlit

Accuracy (for ambient temperature 23±5°C)

- for temperatures -200 ... -93°C ±0,3% of reading ±5°C

- for temperatures -93 ... 1000°C ±0,3% of reading ±1°C

- for temperatures 1000 ... 1360°C ±0,5% of reading ±1°C

- for temperatures -200 ... 1832°F ±0,3% of reading ±2°F

- for temperatures 1832 ... 1999°F ±0,5% of reading ±5°C

Additional error dependent on ambient temperature

- for ambient temperatures <18°C i >28°C 0,1 basis error / 1°C

Resolution of readings

- for temperatures 0 ... ±200 0,1°C / 0,1°F

- for temperatures >200 1°C / 1°F

Sensor inputs miniature sockets PN-EN 50212

Sampling frequency 1 time per second

Case 150 x 72 x 35 mm (235g), IP30

Power supply 6 x 1.5V AAA batteries

- battery life 200 hrs with alkaline batteries

Operating temperature / max. relative humidity 0...+50°C / 80% RH non-condensing

Signaling (messages on the display)

- measurement range exceeded **OL**


 
- sensor not connected or defective **OL**

4. meter functions

- Celsius or Fahrenheit temperature scale
- automatic switch off of the power supply after 30 min.
- internal memory with a capacity of 150 results
- temperature display retention
- display of maximum, minimum and average values

Description of the meter's buttons

- ① LCD display
main display - reading T1, T2 or T1-T2
lower display - reading T1, T2, MAX, MIN, AVG
small display - 24 hour clock
- ② **HOLD** button - pressing **HOLD** stops the or releases the value of the measured temperature
- ③ **⏻** power on/off button
- ④ **MX/MN** button - registration of measured value
Minimum **MN**, maximum **MX** or average **AVG** counted down on the clock from the moment the button is used.
Pressing and holding the **MX/MN** button for 1 sec will exit the mode.
- ⑤ **OFFSET** button - zeroing the readings. Subsequent measurements are displayed in relation to the forced zero (offset). Pressing the button again exits this function.
- ⑥ **☀** button - backlight on/off switch (automatically switched off after 1 min.).
- ⑦ **C/F/K** button - selection of Celsius, Fahrenheit or Kelvin temperature scale.
- ⑧ **Time** button - enable countdown in minute-second (min:sec) or Hour-minutes (hour:min). Holding the button for 1 sec turns the timer off.
- ⑨ **T1 T1-T2 T2** button - selection of the main and lower display
- ⑩ T1 socket for temperature sensor connection
- ⑪ T2 socket for temperature sensor connection

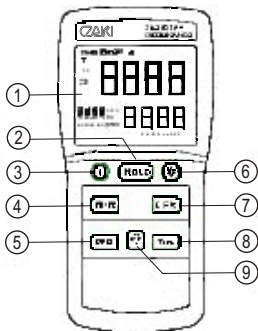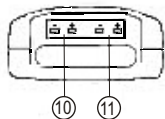

5. temperature measurement and handling of the meter

- connect the temperature sensors to sockets **T1** and **T2** and turn the power on with the **ⓘ** button
- set the desired functions on the meter **C/F/K** **T1/T2/T1-T2** **MX/MN** **HOLD** **OFFSET** **Time**
- place the measuring tips of the temperature sensors in the measured objects and read the indications on the display
- after finishing the measurements, turn off the meter

Battery replacement

Discharge of batteries is signaled by the **BT** sign on the display. Batteries are placed in a container on the back of the meter. The container is closed with a single screw. Do not use the meter with discharged batteries.

Checking the meter

Short the terminals of the sensor input, the meter should show the ambient temperature.

6. Equipment

- meter
- 6 x 1.5V AAA batteries
- instruction manual with warranty card

Additional accessories

To work with the EMT-302 temperature meter, we offer the following exemplary types of temperature sensors equipped with MT-K plug (sensor catalog is available at www.czaki.pl):

